







# 1 Handling manual - plugging

# 1.1 Step 1

Collar the connector [1] to the mating side [2] and insert the connector.

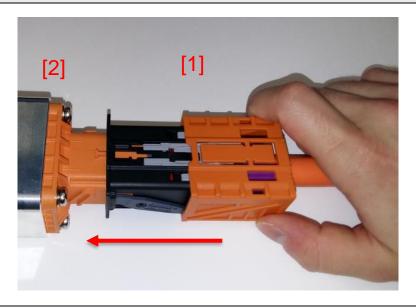

### TIPP:

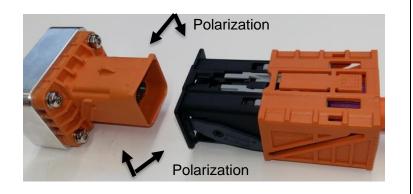

Consider the correct orientation/ alignment of the polarization.


Creator: Natter T.

Dated: August.2022



# 1.2 Step 2

### Push on the plug with force until the catch snaps in.

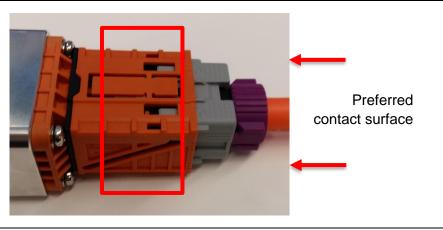

### TIPP:




If the connector is not at the final position, the locking hook stays outside. Movement of the CPA (grey part) is not possible.




# 1.3 Step 3

### Push CPA (grey part) forward until it engages, and the closed lock is visible.

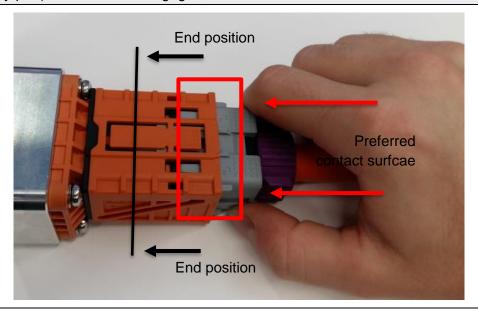

### TIPP:

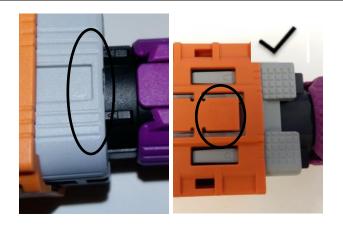


The CPA (grey part) is closed when the closed lock and arrows are visible.

Creator: Natter T. Dated: August.2022




# 2 Handling manual - disconnect

## 2.1 Step 1

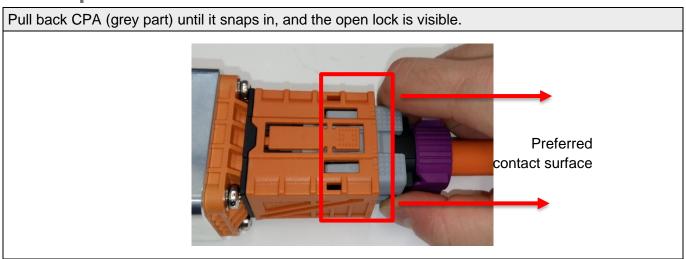

#### TIPP:

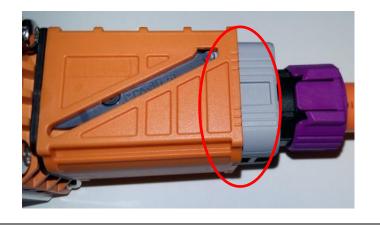

Pulling back by holding at marked area on both sides simultaneously.


Creator: Natter T.

Dated: August.2022




# 2.2 Step 2

Press the clicks and hold in this position. Remove the plug.

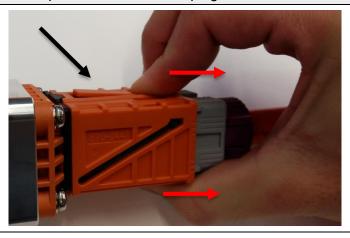

### TIPP:

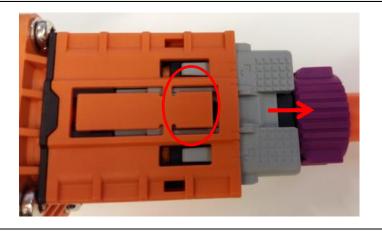

Pressing area of the locking hook on both sides.